

Quick-Step Foamstrip for Alpha Vinyl

NEVRFOAMSTRIP15



Laminate


Vinyl

Parquet



Order Quantity

Per piece of 15 meters

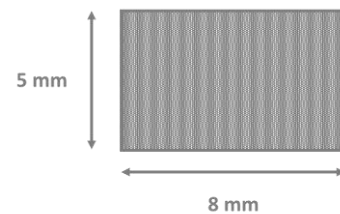

Dimensions

15000 x 8 x 5 mm

Contents:

One piece exists of 1 foamstrip

Product Description:

PE foam expansion joint filler for a watertight finish of your Alpha Vinyl floor.

Installation:

1. Install your underlay on the subfloor. Lay the underlay up to the wall.
2. Install your Alpha Vinyl floor on top of the underlay, taking into account the 8 millimeters expansion joint that is needed so the floor can expand and retract.
3. Fill up the expansion joint with the foamstrip. The foamstrip has a self-adhesive backing to make application more ease (sticky side down, on underlay).
4. Use Quick-Step Hydrokit to seal the foamstrip. Apply a layer of the Hydrokit on top of the foamstrip, including a small contact area with the wall and the Alpha Vinyl floor.
5. Finish of your room with a perfectly colourmatched vinyl skirting or scotia, together with the Hydrostrip (resp. NEHSTRIPSK15 and NEHSTRIPSCOT15), or our white paintable waterproof skirting (NEVSKRPAINTA).